



SPEED SOURCE  
GPS



FALLBACK TYPE  
Manual



WHEEL FACTOR  
0.26000 ft/pulse

Go to Implement/Seeder/Speed Source and set the SPEED SOURCE to GPS and the FALLBACK TYPE to Manual



Granular



NH3



Fan



Pumps



Drill Control



Accessories



Weigh Scales



Speed Source



Audio



Select



New



ECU



Geometry



Section  
Control



Seeder



Operator  
Inputs



Speed &  
Position



User



System



Vehicle



Implement



Product

# Implement Event Audio Setup



MASTER SWITCH AUDIO  
Enabled



TANK SWITCH AUDIO  
Enabled



DRILL LIFT LOWER AUDIO  
Enabled



SECTIONS ON OFF AUDIO  
Enabled

This is where you can enable an audible click for the above functions if desired.



Granular



NH3



Fan



Pumps



Drill Control



Accessories



Weigh Scales



Speed Source



Audio



Select



New



ECU



Geometry



Section Control



Seeder



Operator Inputs



Speed & Position



User



System



Vehicle



Implement



Product