



Run all of the functions of the conveyor remote in an open area. See section 7.2 of the 7000 series operators manual.

