


 
← Auto Section Control

CONTROL MODE

  97

 BOUNDARY LIMIT
Unlimited


 ASC ON

← Seeder Controller 

 1 2 3 4



The next step will be to enter the setup menu. Press the wrench icon located in the lower left corner of the operating screen.



 1	---	1	---	2	---	3	---	4	---	 0.0 mph	
 2	---		---		---		---		---	 0.00 ac	 0.00 ac

Regional Units



UNITS
Imperial(US)



CAPACITY UNITS (DRY)
US Bushels



LATITUDE/LONGITUDE FORMAT
DMS



VOLUME UNITS (DRY)
Pounds



PRESSURE UNITS
Default (psi)



DRY DENSITY UNITS
Pounds Per Cubic Foot



SHORT DISTANCE UNITS
Default (Inches)



APPLICATION RATE INCREMENT TYPE
Fixed Rate



AREA UNITS
Default (ac)

Go to User/Region/Units and make sure the units are as indicated above



Language



Time/Date



Units



Region



Lightbar



Environment



Map



Access Level



User Controls



Remote Support



User



System



Vehicle



Implement



Product