

GPS Receiver Selection



GPS RECEIVER
NMEA Source



BAUD RATE
38400

Go to System/GPS/Receiver and set GPS RECEIVER to NMEA Source, the BAUD RATE must match what the tractor is outputting. See the customer service section of the Bourgault web site for set up instructions.

