

9 Starting a New Field/Job

9	Starting a New Field/Job	9.1
9.1	Introduction	9.2
9.2	Field Menu	9.4
9.2.1	Selecting an Existing Field	9.4
9.2.2	Starting a New Field	9.5
9.2.3	Unload Field	9.5
9.2.4	Setting Flag Points	9.6
9.2.4.1	Removing Or Changing Flag Points	9.6
9.2.5	Field Boundary	9.7
9.2.5.1	Recording a Boundary	9.7
9.2.5.2	Manipulating Field Boundaries	9.9
9.2.6	Headland	9.10
9.2.7	Clear Field Boundary	9.12
9.2.8	Creating a Field Boundary From a Shapefile	9.12
9.2.9	Creating A Field Boundary From A Coverage Map	9.13
9.3	Job Menu	9.14
9.3.1	Selecting An Existing Job	9.14
9.3.2	Creating a New Job	9.15
9.3.3	Configure Job Regions	9.16
9.3.4	Recording Job Information	9.17
9.3.5	Exporting Job Report	9.18
9.3.6	Clearing a Job	9.18
9.3.7	Variable Rate Control	9.19

9.1 Introduction

Before product application begins, the following steps need to be completed in the specified order:

1. Select an existing field or create a new field, refer to [Section 9.2 - Field Menu](#).
2. Select or create a new job, refer to [Section 9.3 - Job Menu](#).

Important

With a GPS signal detected, the X35 console will not allow product application without first loading a job (master switch will remain red).

Note

It is highly recommended to enable the "Job Assist" feature or setup "Quick Start" feature.

3. To enable "Job Assist" or "Quick Start" feature, refer to [Figure 9.1](#):
 - a. Go to Setup.
 - b. From the menu, select System/Features/ Guidance
 - c. For Job Helper Mode, select Job Assist or Quick Start.
 - i. If Quick Start is selected, it would need to be configured, to do that in the Setup screen select System/ Features/Quick Start, for more details refer to [Section 4.1.7 - Quick Start](#).
 - ii. If configured correctly, Quick Start will automatically walk you through the following setup to start/change fields and jobs.



Figure 9.1 - Enabling Job Assist

- d. To open the Job Assist Window or Quick Start in the operational screen, select the icon for that feature from the menu on the right side of the screen, refer to *Figure 9.2* & *Figure 9.3*.

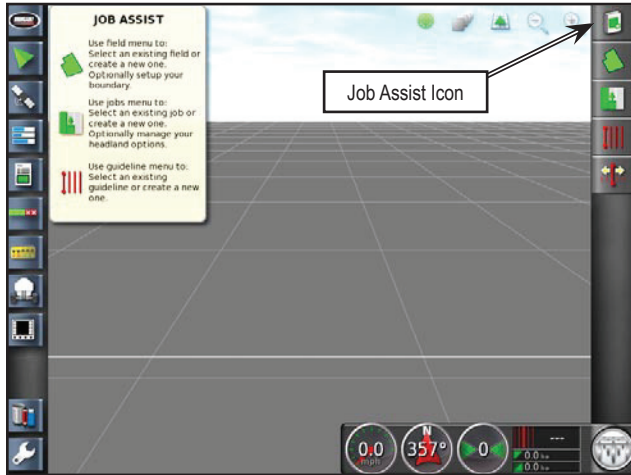


Figure 9.2 - Job Assist

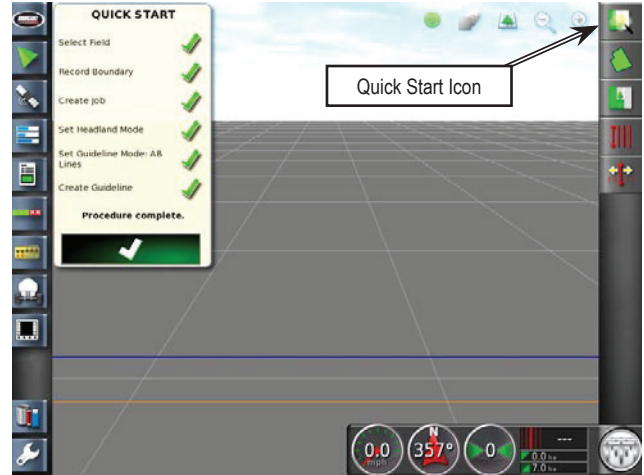


Figure 9.3 - Quick Start

- 4. The X35 console records and stores information about the client, farm, field and the jobs as shown in *Figure 9.4*.

- a. It is important to create clear names for farms, fields and jobs so that the information can be accessed easily next season.
- b. When creating a job name, there is no reason to include the field name, due to the file structure (jobs are stored under the fields).
- c. Multiple jobs can share the same name, provided that they are all stored under different field names.

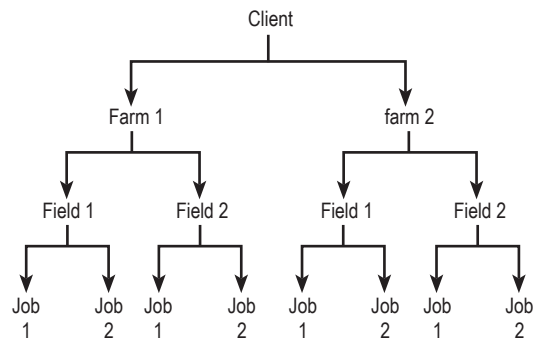


Figure 9.4 - Information Levels



9.2 Field Menu

The field menu provides the tools to set client, farm, boundaries, flag points and exclusion zones.

The X35 console will store information such as boundaries, obstacles, exclusion zones, guidelines under the field, so it can be easily recalled for other jobs in the same field.

9.2.1 Selecting an Existing Field

Refer to *Figure 9.5*.

1. From the Job/Guidance Toolbar on the right side of the guidance screen select the Field icon  and then select  to open up the Select Field window, refer to *Figure 9.6*.
 - a. The list of fields for the currently selected client and farm will be displayed in the Field section.
2. Confirm that the right client and farm are selected (names displayed in the corresponding tabs) and select the required field and confirm.

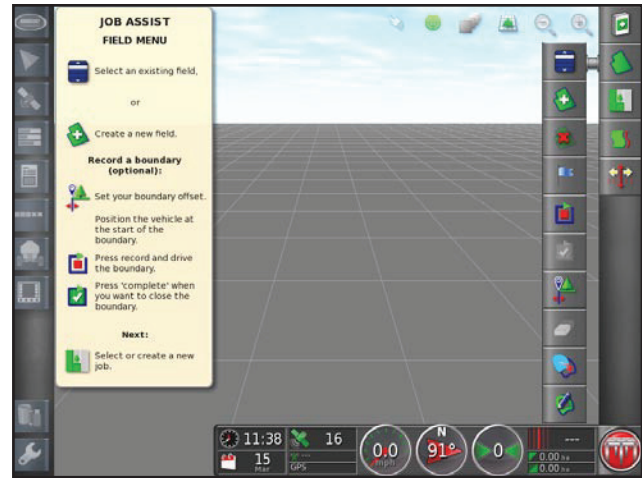




Figure 9.5 - Field Menu

- a. To change client or farm, select the corresponding tab and then make a selection from the list.
 - i. You also can choose the closest field based on your current GPS location by selecting .
 - ii. Alternatively, you can select a field from a USB device.
 - iii. To switch to USB memory, the USB device must be connected. Then select .

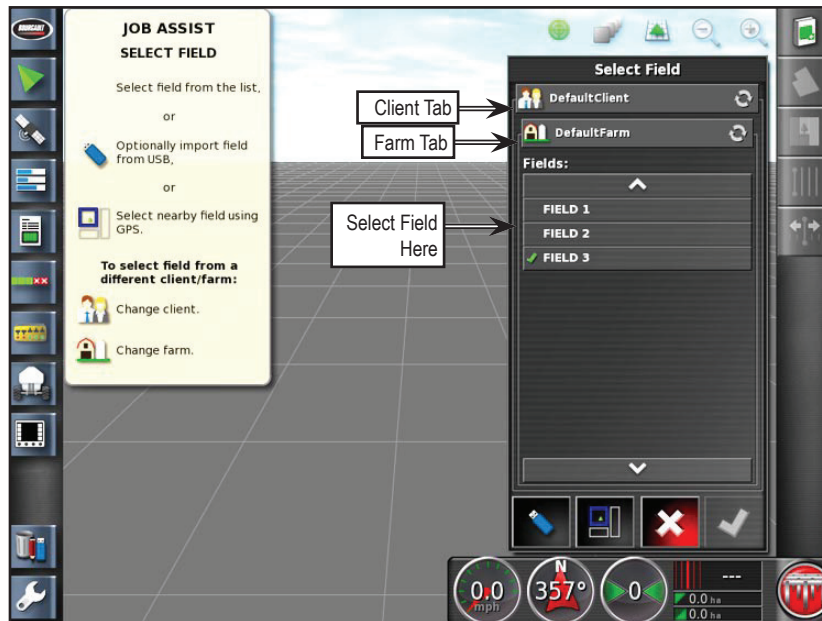


Figure 9.6 - Select Field Window

9.2.2 Starting a New Field

Refer to *Figure 9.5*.



1. From the Job/Guidance Toolbar on the right side of the guidance screen select the Field icon  and then select  to open up the Add New Field window, refer to *Figure 9.7*.
 - a. Select the Client Name button to select or create a new client.
 - b. Select the Farm Name button to select or create a new farm.
 - c. Select the Field Name button and then enter a new field name.




Figure 9.7 - Add New Field Menu

Note

To rename a Client, Farm or Field after they have been set up, refer to *Section 10.6 - Inventory Manager*.

9.2.3 Unload Field

The current field can be closed out of before moving to a new field.

1. Select the unload field icon  from the field menu to close the field.
2. The field will be automatically unloaded/closed after travelling 15km (~9 miles) from it.